



Thank you for choosing UNO⁴. Please read all instruction carefully to guarantee rates & service!

For technical support please call 166 or +17182585200 and press the Call Key. To report lost phones call the number above or visit www.uno4.com/lostphone.cfm

FOR NETWORK TROUBLESHOOTING PLEASE SEE ITEM # 2

- On the back of the phone is a sticker with your UK number.
- To reach you, callers will dial the full number on the sticker and must include the international dialing prefix from their specific country. (see below)
- Your phone works in most countries; rates vary depending on country, Consult our web site for details.

SIEMENS

Overview of the phone

- ① **Display indicators**
Signal strength/GPRS/battery level.
- ② **Soft keys**
Press the soft key to call up the function that is displayed as **Text** or icon on the grey fields above the key.
- ③ **Call key**
Dial displayed phone number or name, accept calls. In standby mode: Display the last calls.
- ④ **On/Off/End key**
 - Switched off: **press and hold** to switch on.
 - During a conversation or in an application: press **briefly** to finish.
 - In menus: press **briefly** to go back a level. **Press and hold** to return to standby mode.
 - In standby mode: **press and hold** to switch off phone.
- ⑤ **Navi-key**
In lists and menus:
 - ⬆ Scroll up and down.
 - ⬇ Function call.
 - ⬅ Back a menu level.**During a call:**
 - ⬆ Open call menu.**In standby mode:**
 - ⬇ Open Phonebook.
 - ⬆ Open menu.
 - ⬅ GPRS info.
- ⑥ *** Press and hold**
 - In standby mode: switch on/off all signal tones (except alarm).
 - For incoming calls: only switch off ring tones.
- ⑦ **# Press and hold**
In standby mode: switch key lock on/off.



A75

Powering Up & Network Options

1. To turn your phone on, press and hold the **On/ Off/ End** key for 2 seconds. When asked to confirm “**Switch On**” simply press **OK**. To turn phone off press and hold the **On/ Off/ End** key for 2 seconds
2. The phone will automatically search for the local network; once connected your phone is ready to use. Should there be any trouble with the network, you can manually change the network.
 - a. Press the **Soft Key** under menu and scroll to the **Settings** and press the **Soft Key** under **Select**.
 - b. Scroll to **Network** and press the **Soft Key** under **Select**.
 - c. Scroll to **Network Info** and press the **Soft Key** under **Select**.
 - d. You can choose any network using the **Navi-Key** and press the **Soft Key** under **Select**.

Making & Receiving Calls

1. Hold the **0** key until it become a + then enter the country code, city code and number then press the **Call Key**. *Example +44 XX XXXXXXXX to dial the UK or +1 XXX XXX XXXX to dial the USA*

Ignore any messages some phones may display during this process. Example: “Calls barred”, “Number restricted” “not allowed” and “Please wait....”

2. After dialing the number, there will be a slight pause, and your phone will then ring. Simply answer the phone by pressing the **Call Key** and your call will now be connected.
3. To reach you, callers must dial their country’s international access then the full number listed on your phone, including the 44. (Example: From USA 011-44-xxx-xxxxxxx; from Europe 00-44-xxxxxxx)
4. If you have opted to add a US number to your UNO⁴ Phone, callers from the US can dial that domestic number to reach you anywhere in the world. (Ex: 1-646-555-1212) [you will be charged a per minute rate]

Text Messages (sms)

Your phone is able to send and receive text messages. (Coverage varies by country)

To create an **SMS**, press the **Soft Key** under **New SMS** then the **Soft Key** under **OK**. Begin typing your message; use the **Navi-Key** to move the cursor between letters. To send the SMS press the **Soft Key** under **Options**; **Send** will be highlighted; press the **Soft Key** under **Select** then type the recipient’s phone number and press the **Soft Key** under **Select** until you see the words **Message Sent**

Voice Mail

Voice mail is automatically enabled on your phone and will accept calls when you do not answer in time or if your phone is off. You will be sent a text message alerting you of any new **Voice Messages**.

To retrieve the message:

1. **General Access:** Dial **077** and press **Call Key**, the first time you call you will be able to set up the mail box, during future calls the system play all you saved messages. A voice prompt will explain how to skip, delete, replay or save messages.

Billing

The UNO⁴ billing system operates on an auto recharge concept. Upon shipment of your phone your credit card was billed for all rental, shipping and set up fees for additional services (where applicable). A revolving credit line of \$100 will be extended for phone usage. As you the credit limit your credit card will be charged in intervals of \$100 for usage. If the card is declined, your service will be suspended. To update your credit card please call our 24 hour automated system at +1-703-286-2716. Once the new information has been verified and the balance reset, your phone service will be reinstated within 2 minutes.

Returning Your Phone

Your phone must be returned to its original pick up point or postmarked within 48 hours of your return to avoid a late fee of \$4 per day. To use our return service (\$10 fee will be added to your account)

Place the phone and all accessories including the waist pouch into a box and affix the provided label to the outside. The package should be dropped into any UPS drop box, left at any UPS authorized shipping location or given to any UPS driver. If you choose to ship your phone any other way please obtain a tracking number and insurance of no less than \$100. Phones should be addressed to: Shipping Dept. 1912-B Flatbush Ave Brooklyn, NY 11210. Customer is responsible until phone is received.